


FLAT TOP CANOPY FASTENING

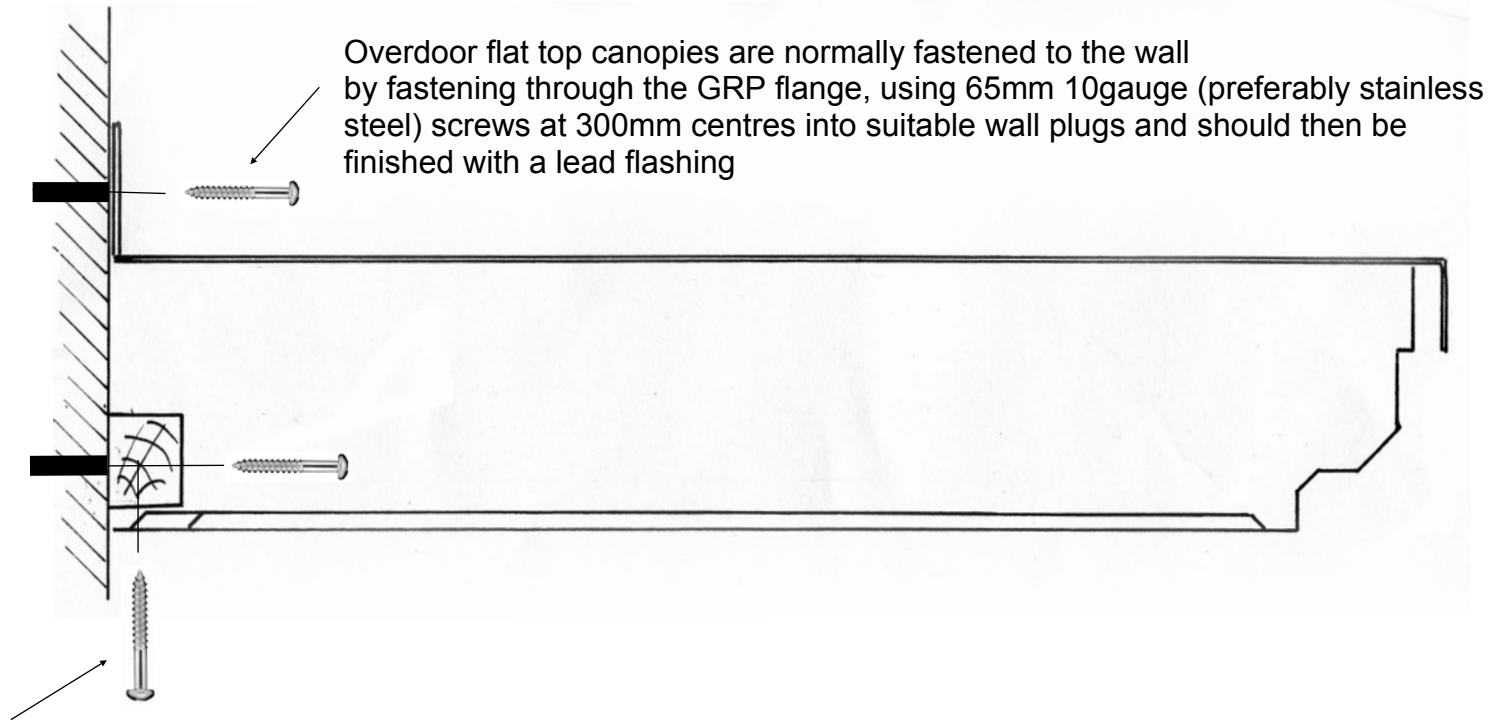

Further fastening can be provided by a timber batton being fastened to the wall above the doorway, into which the base of the canopy can be fastened.

If further support is required, gallows brackets can also be fitted to the underside of the canopy or for projections greater than 1200mm consideration should be given to using corner posts. (For fastening of gallows brackets, see Gallows Bracket Fastening drawing)

Note: All fastening should be done prior to the fitting of flashing

Safety Notice:

GRP Canopies are both functional and decorative,
but they are NOT designed to be stood upon in any circumstance!

NOT TO SCALE

Man Friday (South West) Ltd

5 Marsh End, Lords Meadow,
Crediton, Devon, EX17 1DN

E-mail: info@manfriday.co.uk
Web: www.manfriday.co.uk

Tel 01363 776622